

# WINAM GROUP




## DASH PARKOUR

ASENNUSOHJE  
MONTERINGSANSVISNING  
INSTALLATION INSTRUCTION  
AUFBAUANLEITUNG  
NOTICE D'INSTALLATION















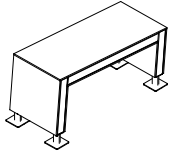

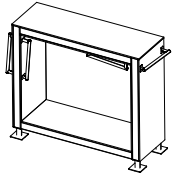



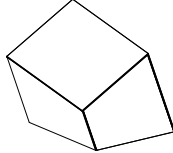

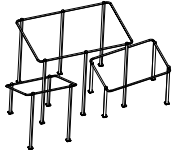

DATE: 19.2.2020



### 081785M



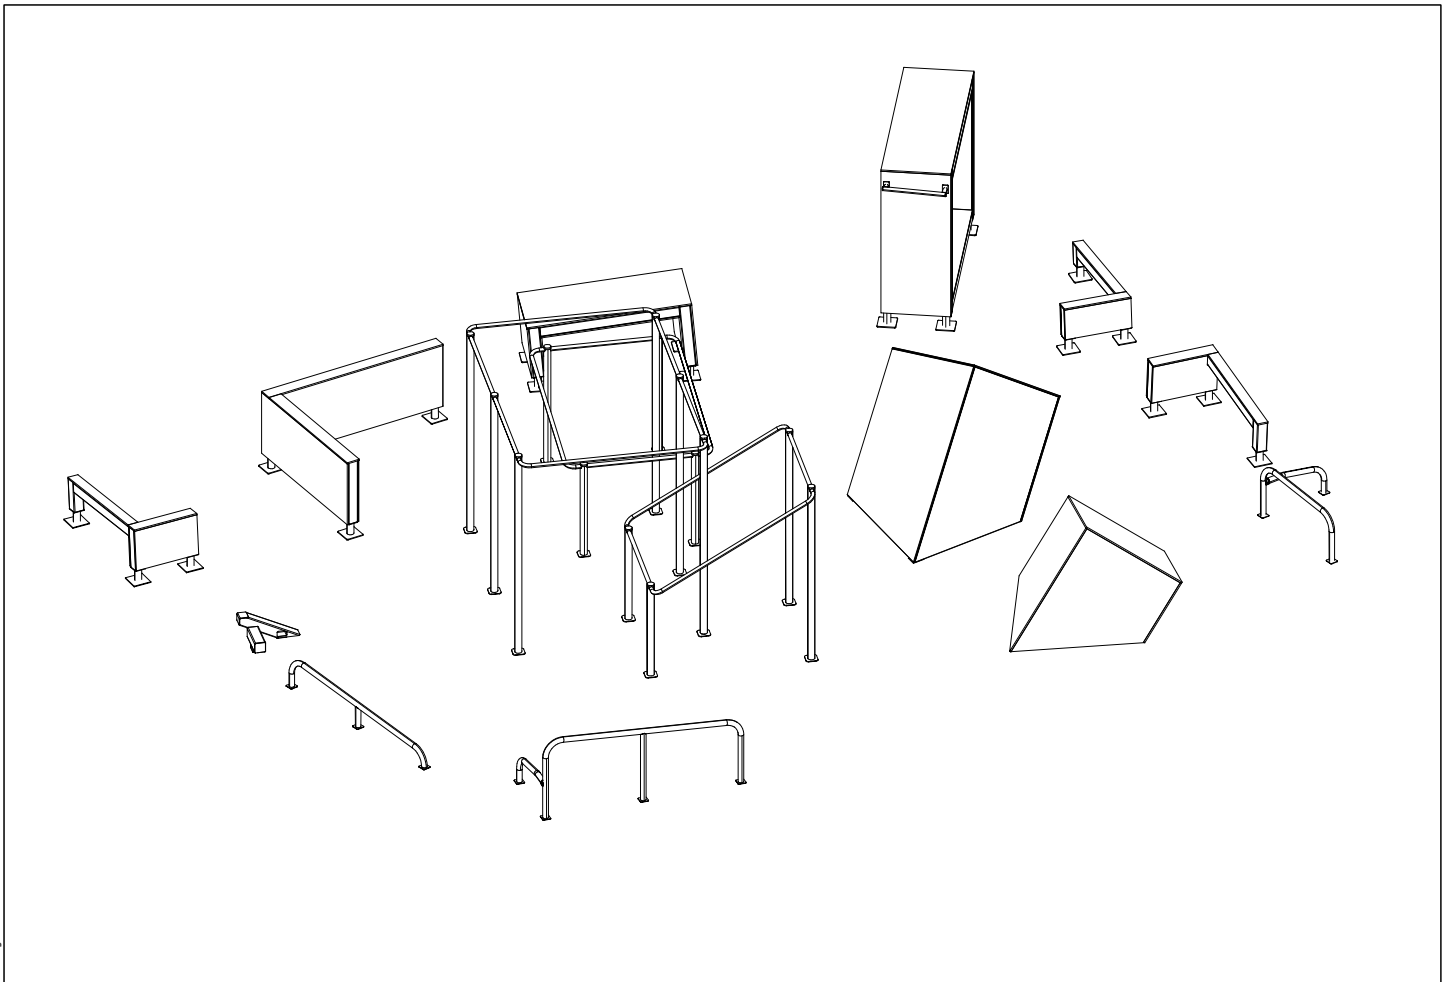



## DASH PARKOUR

DATE: 19.2.2020

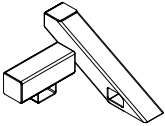081701M  	PCS 1	081710M  	PCS 1	081711M  	PCS 1	081712M  	PCS 1	081720M  	PCS 1	081721M  	PCS 2
081722M  	PCS 1	081730M  	PCS 1	081733M  	PCS 1	081740M  	PCS 1	081741M  	PCS 1	081751M  	PCS 1
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS

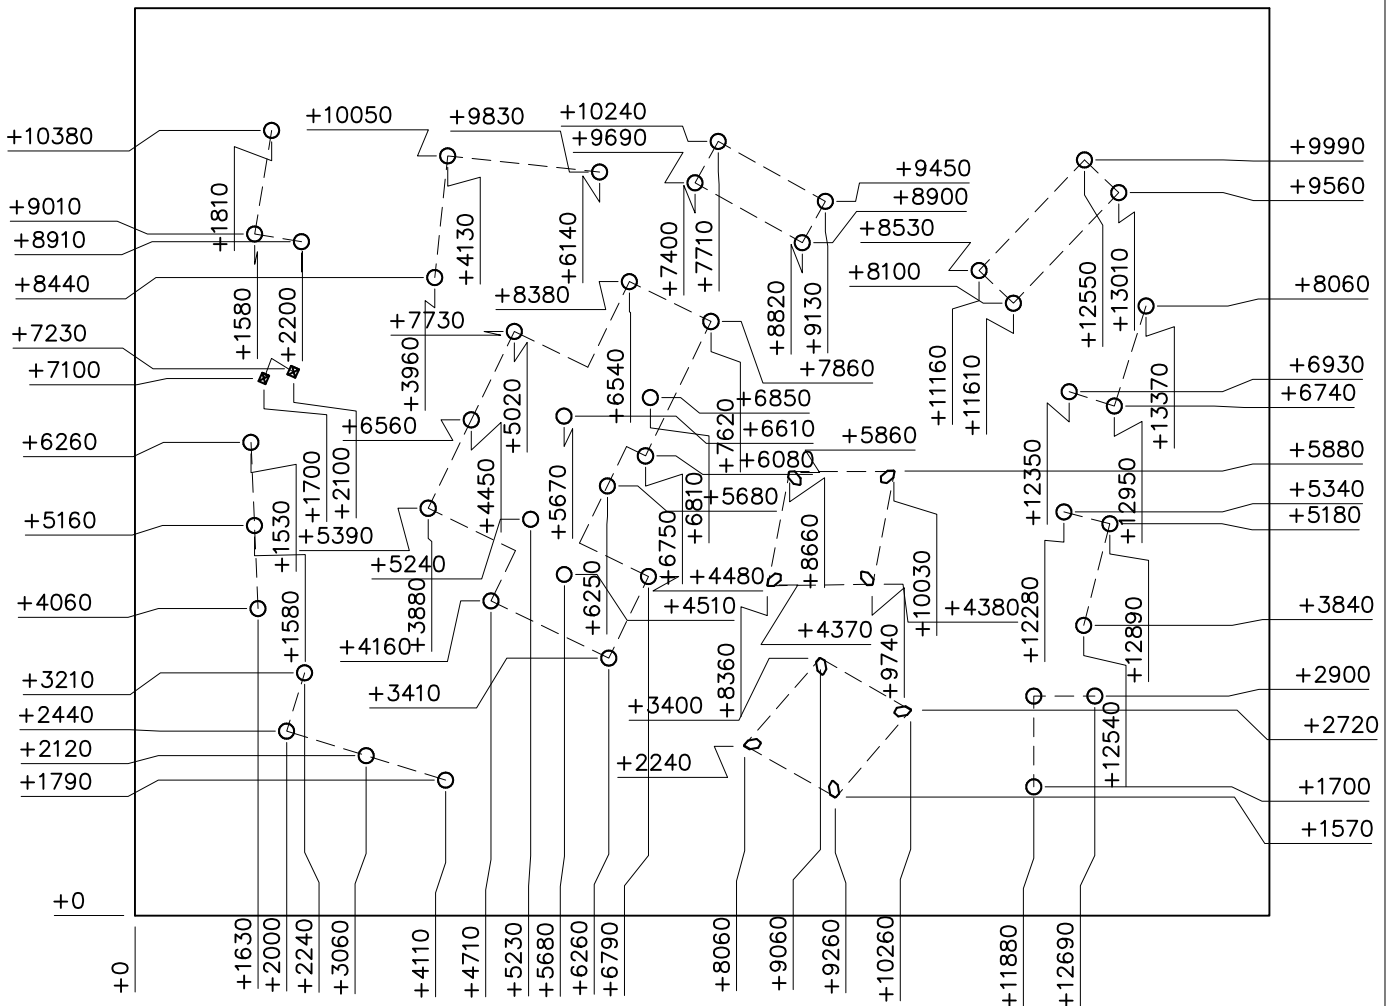

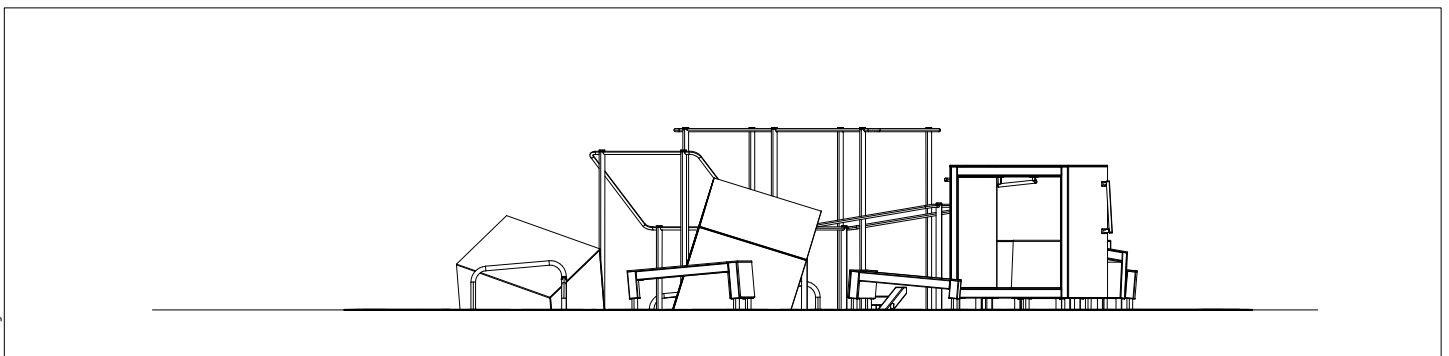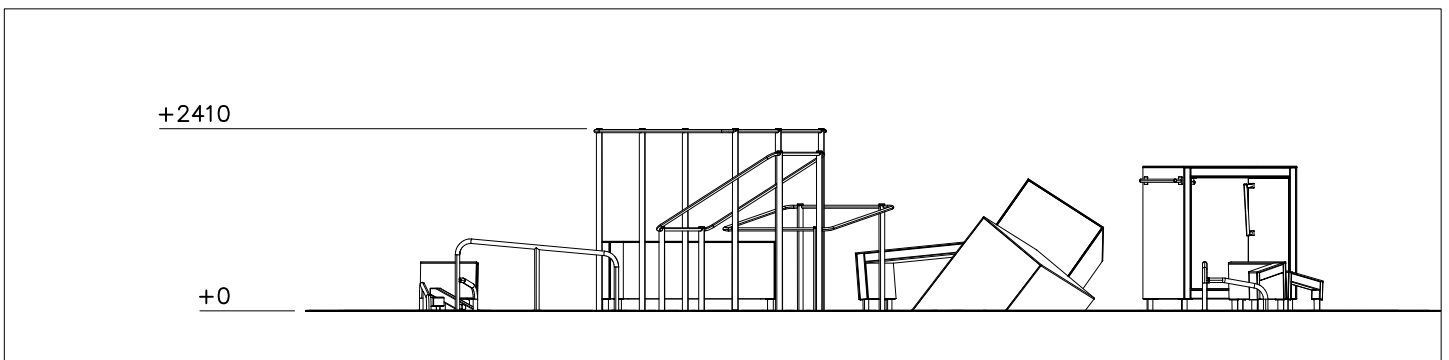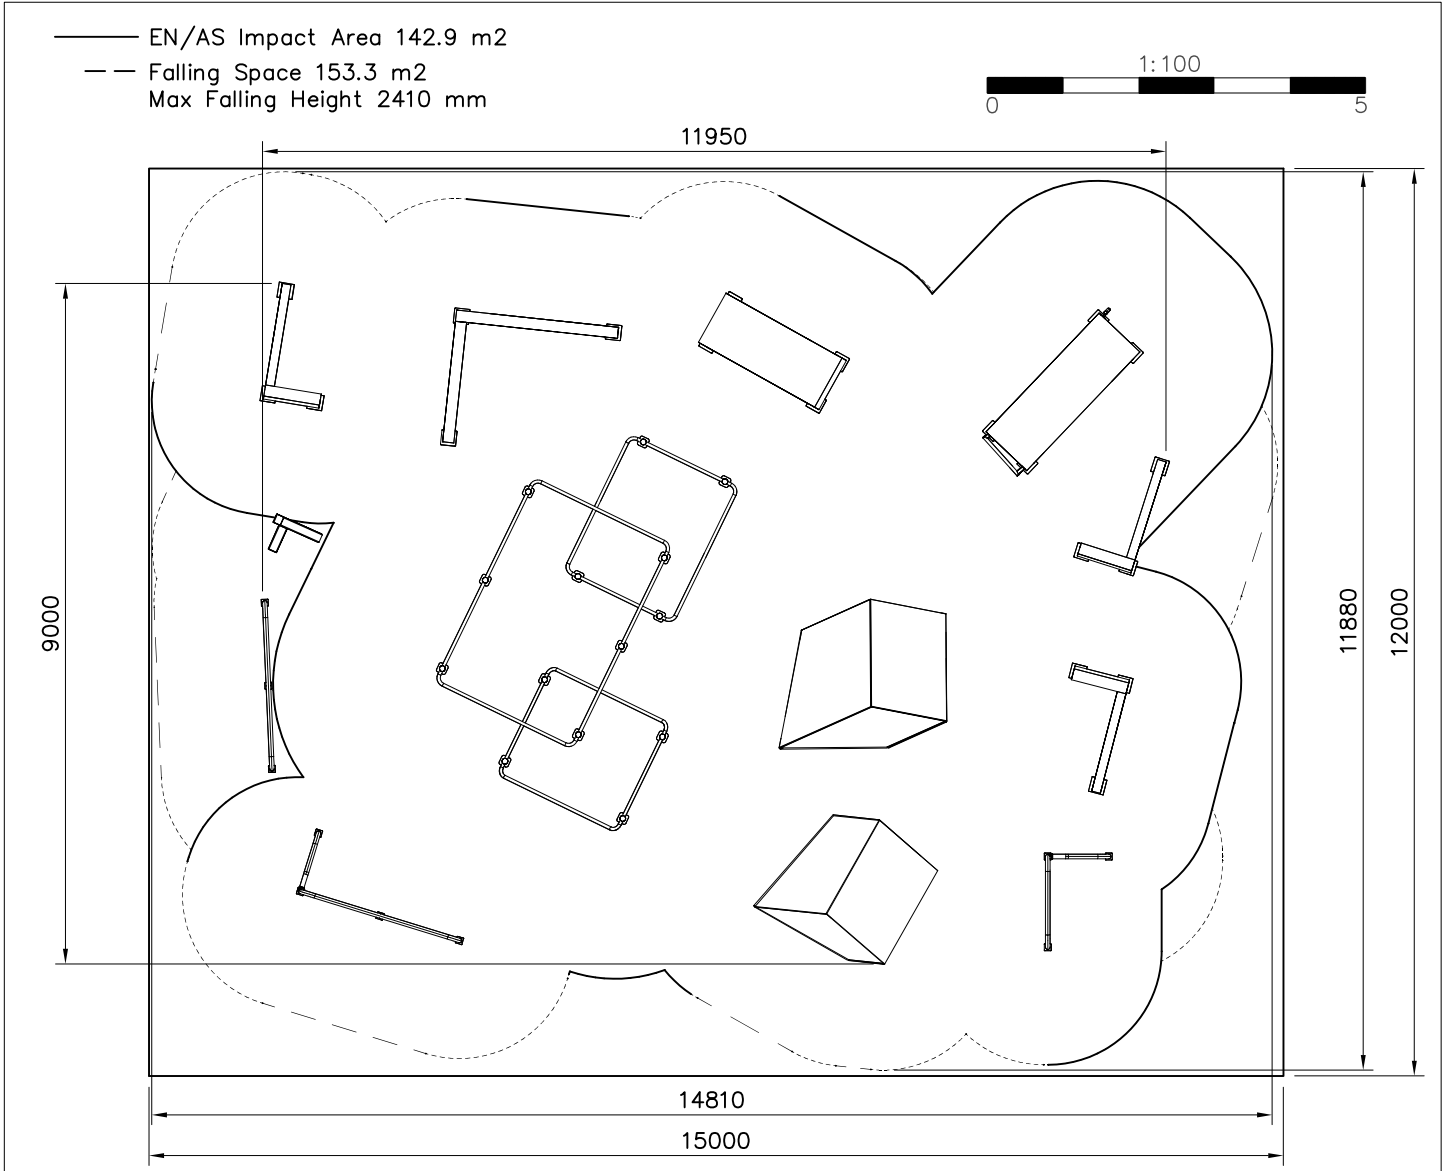



Groundmarks

